




Important Hardy Clip Standing Seam Reminders

1. Be sure to make a cut on every panel above/below at least one clip to ensure the panel does not slide down over time.

Before Cut

RIDGE CAP^

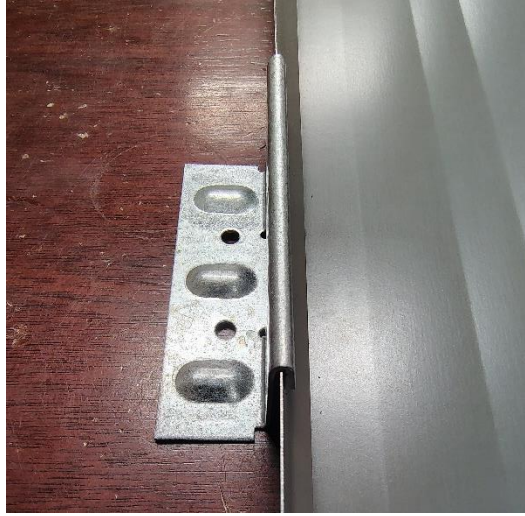

After Cut

RIDGE CAP^



2. Clips should be spaced every 24 inches up the panel.
3. Use two screws per clip to ensure you receive the highest wind rating.